Quick Start Guide

INSTEON® OutletLinc™ On/Off Outlet
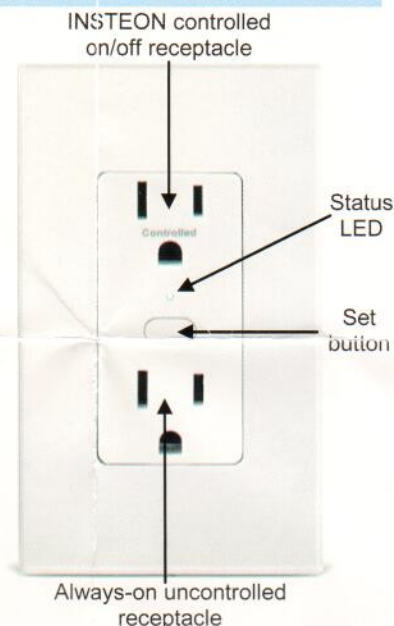## Model: 2473S

INSTEON controlled
on/off receptacle

Status
LED

Set
button

Always-on uncontrolled
receptacle

Tools Needed

- Flathead screwdriver
- Wire cutter/stripper
- Phillips screwdriver
- Voltage tester

Installing OutletLinc

Installation should only be performed by a qualified electrician or a homeowner who is familiar and comfortable with electrical circuitry. If you have questions, consult an electrician or call the INSTEON Support Line at 866-243-8022

1) At the circuit breaker or fuse panel, disable circuit supplying power to outlet
2) Remove existing outlet and wallplate
3) Disconnect wires from existing outlet and ensure you have ½" of bare wire on the ends
4) Enable power to the outlet, then use voltage meter to identify line, neutral and ground wires. Once wires are identified, turn off circuit breaker.
5) Twist OutletLinc ground wire (bare copper) to outlet ground wire with included wire nut
6) Twist OutletLinc neutral wire (white) to outlet neutral wire with included wire nut
7) Twist OutletLinc line wire (black) to outlet line wire with included wire nut
8) After ensuring all wire connectors are firmly attached and that there is no exposed copper (except for ground wire), carefully place OutletLinc into wall box and replace wallplate
9) Turn on circuit breaker
10) Plug lamp, appliance or other device you want to control (load) into OutletLinc top outlet
11) Test by tapping OutletLinc Set button a few times
    Connected light/load will turn on and off

Make OutletLinc a Responder

Control OutletLinc from another INSTEON device:
1) Put controller into linking mode.* (For most controllers press and hold Set button for 3 seconds or an on/scene button for 10 seconds.)
2) Turn on load plugged into OutletLinc
3) Press and hold OutletLinc Set button for 3 seconds
    Status LED will flash, then turn on solid
4) Confirm link by tapping controller's button on and off
    Connected light/load will turn on and off

Owner's Manual and Tech Support

For the complete Owner's Manual and the most up-to-date Quick Start Guide visit: http://www.insteon.com/support
Call: INSTEON Support Line at 866-243-8022

*Linking mode will time out after 30 seconds

INSTEON®